




IMPORTANT: BY PURCHASING OR USING YOUR HITOKI PRODUCT, YOU ARE AGREEING TO COMPLETELY READ YOUR HITOKI TRIDENT'S MANUAL AND TO ABIDE BY THE TRIDENT'S WARNINGS INSTRUCTIONS. DO NOT USE YOUR PRODUCT UNTIL YOU HAVE READ THE MANUAL COMPLETELY. IF YOU DO NOT AGREE TO READ THE MANUAL COMPLETELY AND ABIDE BY THE PRODUCT WARNING INSTRUCTIONS, DO NOT PURCHASE OR USE HITOKI PRODUCTS.




Contents

- Hitoki™ Trident Device
- 34 Inch Take Hose
- 2.0Amp Fast Charger
- USB Type-C Charging Cable
- Herb Poker/Presser

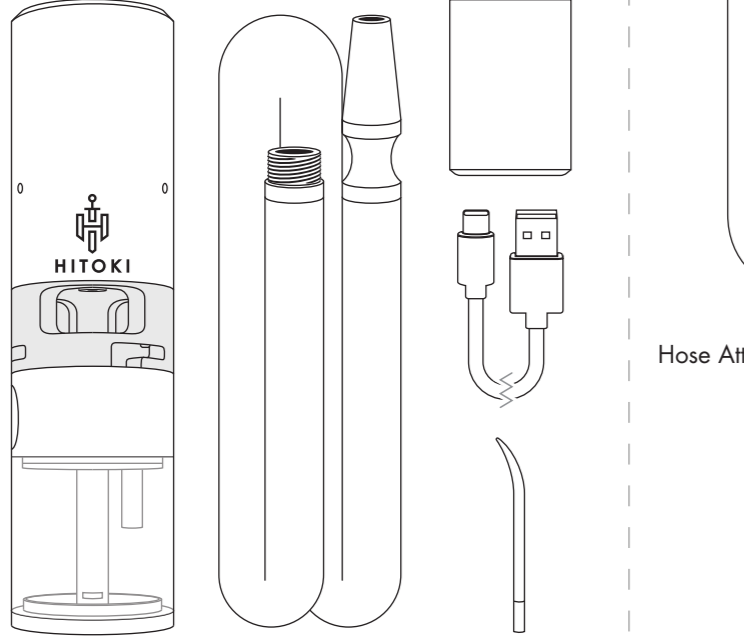

Components

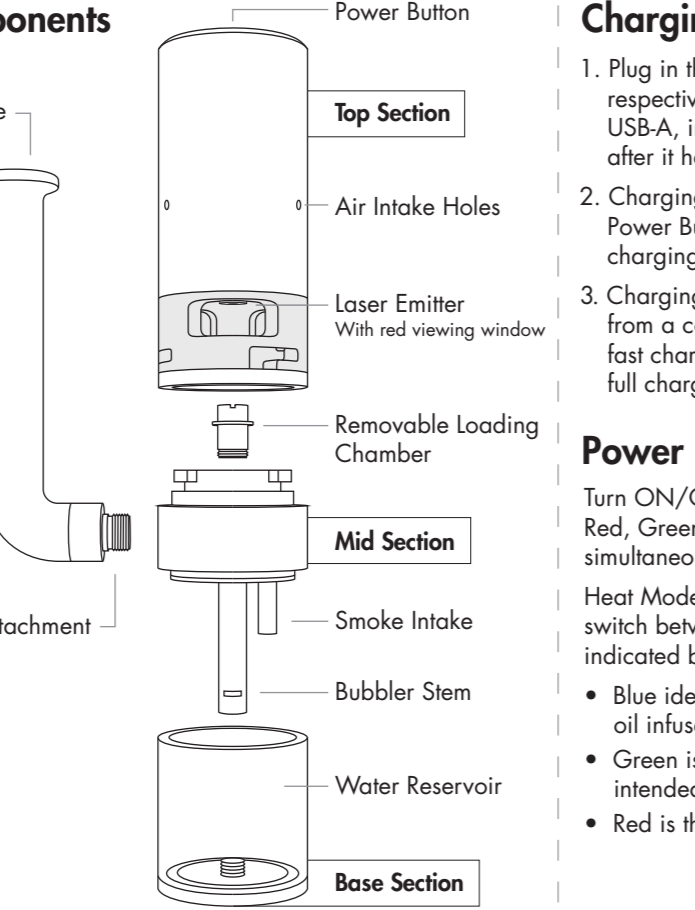

Charging

1. Plug in the provided USB Type-C connector into its respective C port on the device. Plug the other cable end, USB-A, into the provided 2Amp USB-A Wall Charger after it has been plugged into a wall power source.
2. Charging will be indicated by a solid Red light from the Power Button. The button will turn solid Blue once charging is completed.
3. Charging time is approximately 1 hour 45 min starting from a completely depleted battery using the included fast charger and provides approximately 280+ hits per full charge.

Power Button Functions

Turn ON/OFF: Quick press the power button five times. Red, Green and Blue light will flash five times simultaneously indicating the unit is either ON or OFF.

Heat Modes: Quick press the power button three times to switch between different heat settings. Heat modes are indicated by color on the button:

- Blue identifies the highest heat, intended for essential oil infused herbal blends.
- Green is the medium temp setting (recommended), intended for fresh herbal blends and for a better taste.
- Red is the lowest heat if medium temp is too strong.

Prep and Assembly

1. To add preferred herbal blend, first grip Top Section and Mid Section (See diagram) and twist the safety interlocks open to pull apart. Set aside Top Section in upright stance. Pull out the Removable Loading Chamber and pack with herbal blends such as mullein, raspberry leaf, chamomile, peppermint or lavender. If used with Nicotine: Nicotine is an addictive chemical. Pack loosely to avoid airflow restriction and do not fill past the rim or remnants may fall out and get stuck in parts of the device. Insert the Removable Loading Chamber back into its port and reconnect the Top Section with the Mid Section safety interlocks again.
2. To fill water reservoir, grip the Base Section of the device with one hand and the Mid Section with the other and turn counterclockwise until they disconnect. Fill only a quarter of the way full to avoid taking in water during draws. To close, line up the center stem with the threads at the center of the base and turn clockwise until you meet resistance and water reservoir is sealed.
3. Attach the hose attachment by inserting into the hole located on the side of the device by screwing it into the drawing port clockwise until you meet resistance. Once attached, connect the hose by inserting the attachment tool into one end of the hose and the mouth piece to the other end of the hose.

Operation

**Please be sure to charge device fully before initial use.*

Once you have chosen your desired smoke setting, hold the power button down and watch the laser heat the herbal blend through the viewing window. Beam will stop once power button is released. Double click the button for a continuous beam for 9 seconds. Beam automatically cuts off after 9 seconds to protect the laser diode from over-heating.

For Inhalation Purpose: Draw from Pipe for the smoke to travel through the Water Reservoir.

For Aromatherapy Purpose: Fill the loading chamber with your favorite natural herbal blend such as lavender, peppermint, sage, etc. You can also infuse your herbal blend with a few drops of essential oils. Attach the top of the unit to the base. Make sure the device is on. Double tap the button to start the laser. The laser will instantly heat your herbal blend releasing a pleasant aroma. Unlock the interlocks to let the fragrance fill the room.

The use of a laser as a combustion source is not only a clean combustion source it is also extremely effective and efficient. Using a laser allows you to only combust a small amount of your herbal blend so that you can use what is in the loading chamber many times before it needs a refill and allows you to control when you want another burst of aroma.

Maintenance

The Trident must be occasionally maintained and cleaned. We recommend cleaning after every three sessions.

1. To do so, give the power button 5 quick clicks and ensure that it is in lock out mode.
2. Remove the top electrical portion by twisting and pulling away to release mechanical and magnetic interlock.
3. Use a cotton swab dipped in isopropyl alcohol to lightly wipe away any grime on the laser lens until the cotton swab remains white after wiping.
4. Disconnect and set aside the Top Section. Unscrew the Base from the Mid Section and soak both in a cleaning solution.
5. Use the pointy end of the included poker to clear out any debris from the Loading Chamber and intake holes.

*Operating Temperature: 32-158 degrees fahrenheit. DO NOT leave in a hot car or any hot environment.

Troubleshooting

- Only fill water 1/4 of the way or less to prevent water from being sucked up into the bubbler stem. If water is leaking make sure threaded stem is properly fastened to the threads located in the middle of the base.
- Make sure all 4 air intake holes located near the center of the Top Section are free of obstruction. Avoid getting any foreign objects inside.
- Be sure that all holes inside the loading chamber are open and clear of obstruction.
- If the water reservoir is not tightened tightly or properly you will not get a good draw.
- Be sure the air hose is free and clear of obstruction.
- Check to make sure interlock is free of debris.
- If laser is not working, make sure device is charged.
- Hold button down until laser turns on (takes 2 seconds after button is held down to activate.)

Disclaimer

Return, Warranty, and Exchange Policy. You may return or exchange products purchased from Hitoki only in accordance with Hitoki's Return, Warranty, and Exchange policies outlined in the Terms. You are responsible for shipping costs associated with any return, warranty, or exchange. Shipping costs are non-refundable. If you receive a refund, the cost of return shipping will be deducted from your refund. Depending on where you live, the time it may take for your exchanged products to reach you may vary. If you are shipping items which cost more than \$75.00, you should consider using a trackable shipping service or purchasing shipping insurance. We do not guarantee we will receive your returned item.

IMPORTANT: BY USING YOUR HITOKI PRODUCT, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THE HITOKI LIMITED WARRANTY ("WARRANTY") AND THE HITOKI RETURN POLICY. DO NOT USE YOUR PRODUCT UNTIL YOU HAVE READ THE TERMS OF THE WARRANTY AND RETURN POLICY. IF YOU DO NOT AGREE TO THE TERMS OF THE WARRANTY AND/OR THE RETURN POLICY, DO NOT USE THE PRODUCT. IF YOU PURCHASED THE PRODUCT AT WWW.HITOKI.COM, YOU MAY RETURN IT WITHIN THE RETURN PERIOD STATED IN HITOKI'S RETURN POLICY. IF YOU PURCHASED AT AN HITOKI AUTHORIZED RESELLER, YOU WILL BE BOUND BY THE RETURN POLICY OF THE RESELLER.

Warranty Policy

Due to the sensitive storage and operating temperature of lasers modules, Hitoki only warrants to the original purchaser (the "Purchaser") of the Trident (the "Products"), for a period of 6 months from the date in which the Purchaser purchased the Products –

Warning

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF HITOKI. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL HITOKI BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Exchange Policy. Exchanges are only available on defective items and any requests for an exchange must be sent to Hitoki@Hitoki.com. Any exchanges made must be for the same item.

Product Disclaimer

The "Trident" is an electronic aromatherapy smoking device. THE LAWFUL AND PROPER USE OF HITOKI PRODUCTS IS A REQUIRED CONDITION OF SALE. Only legal, safe, identifiable aromatherapy blends such as mullein, raspberry leaf, chamomile, peppermint or lavender should be used with this device. Keep this device out of the reach of children. Research information, product instruction, and all accompany literature before purchasing/using this device or any aromatherapy blends. Products are intended for use by persons of legal smoking age. If used with Nicotine: Nicotine is an addictive chemical. This device is not intended as nicotine replacement therapy or as a smoking cessation product. The use of foreign combustibles or other unintended materials may result in damage to the contents of the product or degradation of the materials and mechanics within the product. Any warranty, expressed or implied, may be voided by improper use. At no point will Hitoki be responsible for actions made by the end user and at no point will Hitoki take responsibility for any unlawful use of its products. By purchasing the product, you confirm your acceptance of the Terms of Use.

Warning

EDAWARNING: **DANGER** – CLASS 4 **VISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED** AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATION.

DANGER: DO NOT place anything inside the ignition chamber or water tank, other than the smoking material and water as defined by the manufacturer. Dangerous laser reflections can occur from misuse.

CAUTION: IMMEDIATELY DISCONTINUE USE OF THE TRIDENT IF RED LASER CYLINDER SHIELD IS COMPROMISED.

ATTENTION: DO NOT leave the Trident in a vehicle or hot environment or risk damaging the laser module.

This device is a Class 4 visible laser and should not be altered or modified in any way. If the interlocks are defeated or any part of this device breaks, including but not limited to breaks or cracks in the viewing cylinder, avoid direct exposure to the beam, as you could be exposed to laser radiation which can cause blindness and other complications if the laser makes contact with skin."